**JPUP** Instruments

If your compass application involves vibration, acceleration, uneven terrain, or rough seas, you will find the Jewell Instruments ECG Series to be an uncompromising solution that will outperform rival units costing considerably more. The ECG provides remarkably accurate heading, pitch, and roll in dynamic conditions. It all starts with a precision 3-axis solid-state magnetometer. Two angular rate gyros independently stabilize pitch and roll. They augment a dual-axis, electrolytic tilt sensor that provides precise tilt measurements in static environments. Two sets of independent filters, one set for pitch and one for roll, combine gyro and electrolytic sensor measurements to provide the best available tilt measurements.

The recommended applications for the ECG are manned and unmanned vehicles, robotics, weather buoys, antenna positioning, platform stabilization, marine navigation, excavation machinery, and irrigation equipment.

The exceptional performance of the ECG is achieved by first calibrating all sensors over a wide temperature range. Then Jewell Instruments aligns the magnetic, tilt, and rate sensors to a common set of axes using precision calibration equipment capable of measuring angles as small as 0.001°. This alignment procedure, driven by our proprietary calibration routines,

## **Features**

- Exceptional Dynamic Performance
  - $\Rightarrow$  Heading within 3° typical for rates < 250 °/sec
  - $\Rightarrow$  Pitch and roll within 0.3° for rates < 250 °/sec
- High Static Accuracy
  - $\Rightarrow$  Heading within 0.5° or better
  - $\Rightarrow$  Tilt within 0.2° or better
- Wide Operating Range
  - $\Rightarrow$  ±42° Pitch and Roll
  - $\Rightarrow$  ±80° Dip angle range
  - $\Rightarrow$  Temperature -40° to 105°C
  - $\Rightarrow$  Local Hard Iron to ±1.5 Gauss
- Precise Calibration
  - $\Rightarrow$  Gyros calibrated for offset and gain from -40° to 85°C
  - ⇒ Rate sensors calibrated and aligned to magnetometer and tilt sensor
  - $\Rightarrow$  Cross-axis error nearly eliminated on gyros and
- magnetometer Single Supply Operation
  - $\Rightarrow$  6 to 45V unregulated DC or
  - $\Rightarrow$  5V regulated DC
  - $\Rightarrow$  Thermal overload and reverse polarity protection

minimizes axis coupling and corrects for gyro drift errors.

The ECG is compatible with Jewell's ECS and ECX series. The ECG board fits in the same enclosure and has the same mounting hole pattern and connectors. Identical NMEA sentences are available, and the ECG version includes additional binary data output for temperature and diagnostics.

The ECG comes with an enhanced version of Jewell's demonstration software that is backward compatible with the ECS and ECX. The magnetic calibration procedure required upon installation is identical, as are cabling and power requirements.



- Fast Response
  - $\Rightarrow$  28 readings per second
  - $\Rightarrow$  Wake from standby in 50 msec
- Low Power
  - $\Rightarrow$  30 mA operating
  - $\Rightarrow$  10 mA sample
  - $\Rightarrow$  5 mA standby
- Wide Selection of ASCII or Binary Output data
  - $\Rightarrow$  Heading, pitch, and roll
  - $\Rightarrow$  Magnetometer X, Y, and Z
  - $\Rightarrow$  Temperature, input voltage, and dip angle
  - ⇒ Output ASCII or binary
  - ⇒ Horizontal X and Y magnetic field strength
  - $\Rightarrow$  Raw and conditioned gyro data
- Two independent serial channels
  - $\Rightarrow$  Full-duplex RS-232 for the external RJ12
  - $\Rightarrow$  Either RS-232 or full-duplex RS-485 for the internal connector
- In-System Configuration and Test
  - $\Rightarrow$  Laptop can be connected while unit operates in situ
  - $\Rightarrow$  Perform hard and soft iron calibration
  - $\Rightarrow$  Monitor outputs and change user-definable settings

# **ECG eCompass Series**

## Specifications

### Heading Performance

Parameter	Value	Conditions
Accuracy <sup>1</sup>	± 0.5° rms	Static, Tilt < 35° Dip < 60°
	$\pm$ 3.0° rms	Dynamic, rate < 250°/sec
Repeatability	$\pm 0.3^{\circ}$	Static, no filter
Response time	36 msec	Minimum, no filter
Dip Angle Range	$\pm$ 80°	
Tilt Range	± 40°	
Update rate	28 per second	
<sup>1</sup> May require calibration after installation t	o eliminate effect of local magnetic field	

## Pitch and Roll Performance

Parameter	Value	Conditions
Accuracy	$\pm 0.3^{\circ}$	Factory calibrated
Repeatability	$\pm 0.2^{\circ}$	No filter
Range	± 42°	
Settling time	0.5 sec	Gyros enabled

### Electrical

Parameter	Value	Conditions
Supply Current	Below values are the same color	
	30 mA operating	typical
	10 mA sample	typical
	2 mA standby	typical
Supply Voltage (V <sub>DD</sub> )	Below values are the same color	
	6 – 45 Vdc unregulated	4.9 Vdc min
	5.0 Vdc regulated	

### Environmental

Parameter	Value	
Operating Temp	-40° to 105°C	
Storage Temperature	-50° to 150°C	
Humidity	0 to 90%	



N/1 -			
11/16	rna	nıca	
11/10	-0110	nica	


Enclosure Material	Plastic Enclosure (P Option): (ABS) Flame Retardant UL94 VO	
	Aluminum Enclosure (A Option): Diecast Aluminum Alloy (Type 360.1)	
PCB Size	1.8"W x 3.0"L x 0.6"H	
PCB Mounting	4 #4 screws, 1.4" x 2.2" spacing	
Weight	Plastic Enclosure (P Option): 3.2 oz. (90.7 grams)	
	Aluminum Enclosure (A Option): 7.2 oz. (204.1 grams)	
Connectors	8 pin, single-row, 0.1" friction header	
	6 pin RJ12 modular jack	

#### Interface

Signal type	RS-232 and RS-485
Baud rate	2400, 4800, 9600, 19200, 38400, or 57600 bps
Character Format	8 data, no parity, 1 stop
Input Buffer Size	110 characters
Output Buffer Size	110 characters
Output Format	NMEA 0183 and binary
Output Data Rate	1 to 1650 sentences per minute
Operating Modes	Continuous or sample
Angle Units	Degrees, mils, radians, 16-bit integer

\*Specifications subject to change without notice on account of continued product development

## **How to Order**

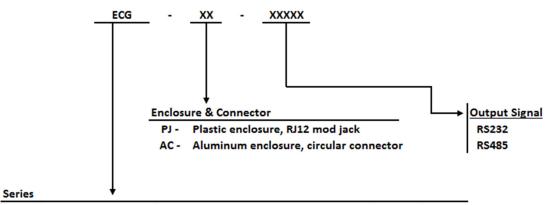

ECG - Electronic Compass with 3-axis magnetometer, 3-axis gyroscope & 2-axis tilt sensor


#### Example:

Rev B

ECG-PJ-RS232

ECG Electronic Compass with 3-axis magnetometer, 3-axis gyroscope & 2-axis tilt sensor plastic enclosure, RJ12 mod jack & RS232 output signal

# **Dimensions of Aluminum Enclosure**

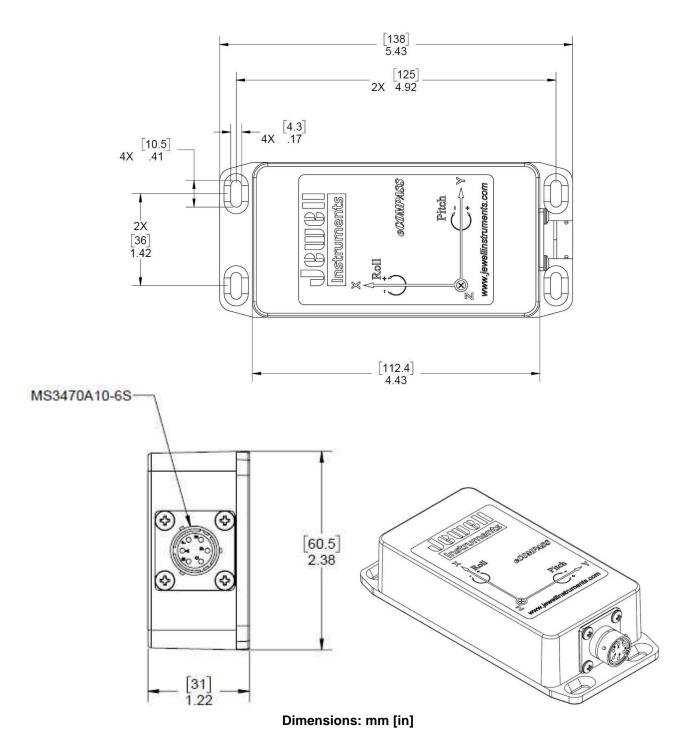


Rev B DSPM Induction\* sensori & trasduttori



Making Sense out of Motion...

# **Dimensions of Plastic Enclosure**

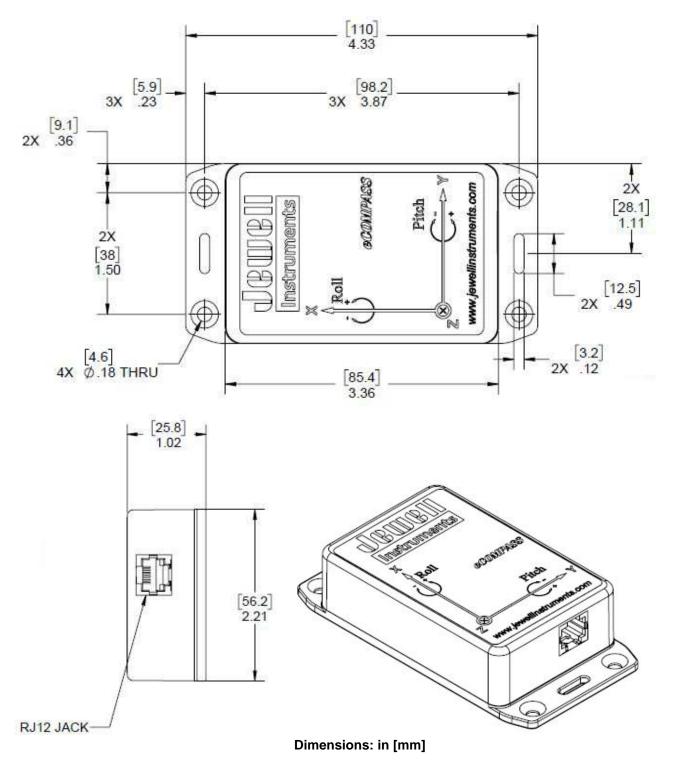



# **ECG eCompass Series**


**URUBER** Instruments Making Sense out of Motion...

## Pin Outs

J1 RJ-12 Jack Pin Out		
Pin 1	Ground	
Pin 2	Power	
Pin 3	ТХ	
Pin 4	RX	
Pin 5	Ground	
Pin 6	100K	


J2 8-Pin Header Pin Out		
Pin 1	Power	
Pin 2	RS232 TX Out	
Pin 3	RS232 RX In	
Pin 4	RS485 RX+	
Pin 5	RS485 RX-	
Pin 6	Ground	
Pin 7	RS485 TX+	
Pin 8	RS485 TX-	

# Interface Block Diagram

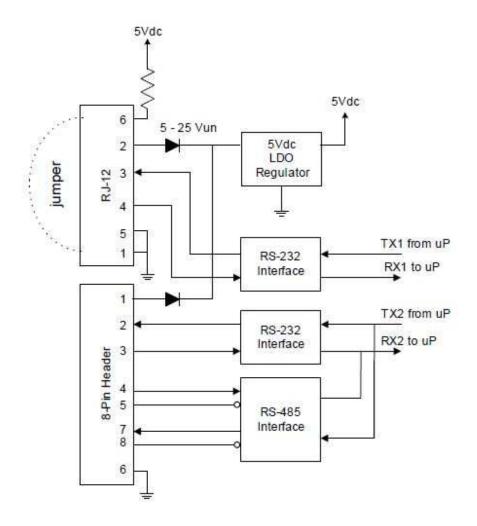

Rev B **DSPM** Inductria\* sensori & trasduttori

## **Wiring Drawings**

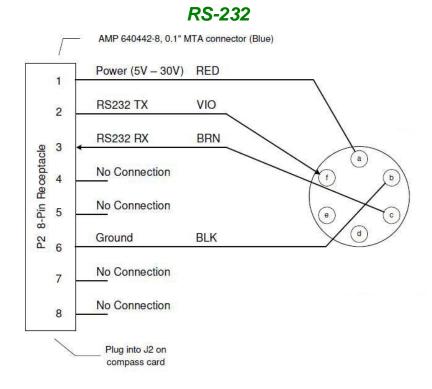

## **RS-485**

